

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and personal injury do not immerse cord, plugs, or appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children. Keep appliance, capsules and accessories out of the reach of children.
5. Unplug from outlet when not in use, before cleaning and before servicing. Allow to cool before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a radiator, hot gas or electric burner, in a heated oven, open flame, or similar. You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean: DANGER WARNING 5 English ESPRESSO MACHINE SAFETY ESPRESSO MACHINE SAFETY
11. This product is designed for indoor household use only. Not designed for commercial use.
12. The safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.
13. The appliance is intended to prepare beverages according to these instructions.
14. Do not use the appliance for any use other than the intended use.
15. This appliance has been designed for indoor, non-extreme temperature conditions use only.
16. Protect the appliance from direct sunlight, prolonged splashes and humidity.
17. This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
18. This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers. Children should not use the device as a toy.

19. The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, nonprofessional repair or failure to comply with the instructions. Avoid risk of fatal electric shock and fire
20. In case of an emergency: immediately remove the plug from the power socket.
21. Only plug the appliance into suitable, easily accessible, grounded mains connections.
22. The appliance must only be connected after installation.
23. Make sure that the voltage of the power source is the same as that specified on the rating plate.
24. The use of an incorrect connection voids the warranty.
25. Do not pull the cord over sharp edges, clamp it or allow it to hang down.
26. Keep the cord away from heat and moisture.
27. To disconnect, turn any control to off, then remove the plug from the outlet.
28. To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flames, or similar.
29. Always place the appliance on a horizontal, stable and even surface.
30. The surface must be resistant to heat and fluids such as water, coffee, descaling agent or similar.
31. Disconnect the appliance from the mains when not in use for a long period.
32. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
33. Never touch the cord with wet hands.
34. Never put the appliance or part of it in a dishwasher.
35. Electricity and water together are dangerous and can lead to fatal electric shocks. 6

ESPRESSO MACHINE SAFETY

36. Do not open the appliance; dangerous voltage inside.
37. Do not dismantle the appliance.
38. Do not put anything into any openings; doing so may cause fire or electric shock!
39. The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
40. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. Avoid possible harm when operating the appliance
41. Never leave the appliance unattended during operation.
42. Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the Spinn Club for examination, repair or adjustment. A damaged appliance can cause electric shocks, burns and fire.
43. Always close the lever completely and never lift it during operation; scalding may occur.
44. Do not put fingers under coffee outlet, risk of scalding.
45. Do not put fingers into the machine; danger of injury!
46. Fill the water tank only with fresh and drinkable water.

47. Do not overfill water tank.
48. Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
49. Replace water in water tank when the appliance is not operated during a weekend or a similar period of time.
50. Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
51. Do not use any strong cleaning agent or solvent cleaner.
52. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
53. Do not use a steam or pressure cleaner to clean the appliance; this may damage the appliance to the point of creating a life-threatening hazard.
54. To clean machine, use only clean cleaning tools.
55. When unpacking the machine, remove the plastic film on the drip grid and dispose.
56. All Spinn appliances pass stringent controls. 7 English ESPRESSO MACHINE SAFETY
ESPRESSO MACHINE SAFETY
57. Reliability tests under practical conditions are randomly performed on selected units.
58. Some units can therefore show traces of previous use.
59. Spinn reserves the right to change instructions without prior notice.